


## Quick reference (“Start” screen)

To display the “Start” screen, push the “MENU” button on the Remote Touch.

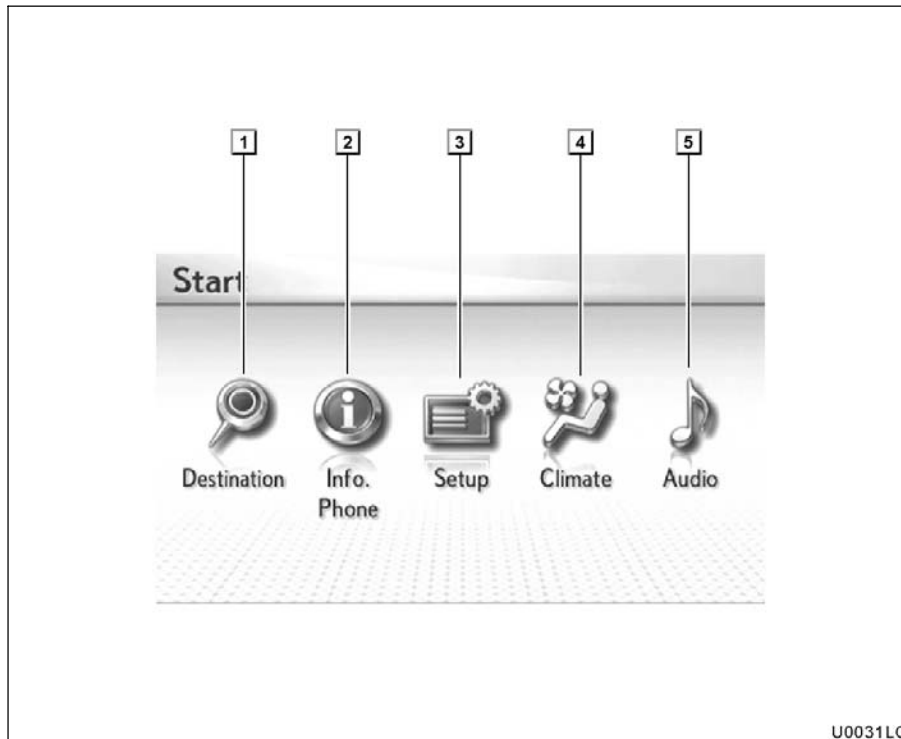

**1 “Destination”**

You can use one of 10 different methods to search your destination. . . . . 18, 65

**2 “Info./Phone”**

Select this button to operate the hands-free system and display fuel economy information, etc. . . . . 21, 135

**3 “Setup”**

Select this button to adjust settings of the navigation, audio and hands-free systems, etc. . . . . 20, 313

**4 “Climate”**


Select this button to operate the air conditioning system. . . . . 275

**5 “Audio”**

Select this button to operate the audio system. . . . . 161

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “MENU” button and select “Destination”.

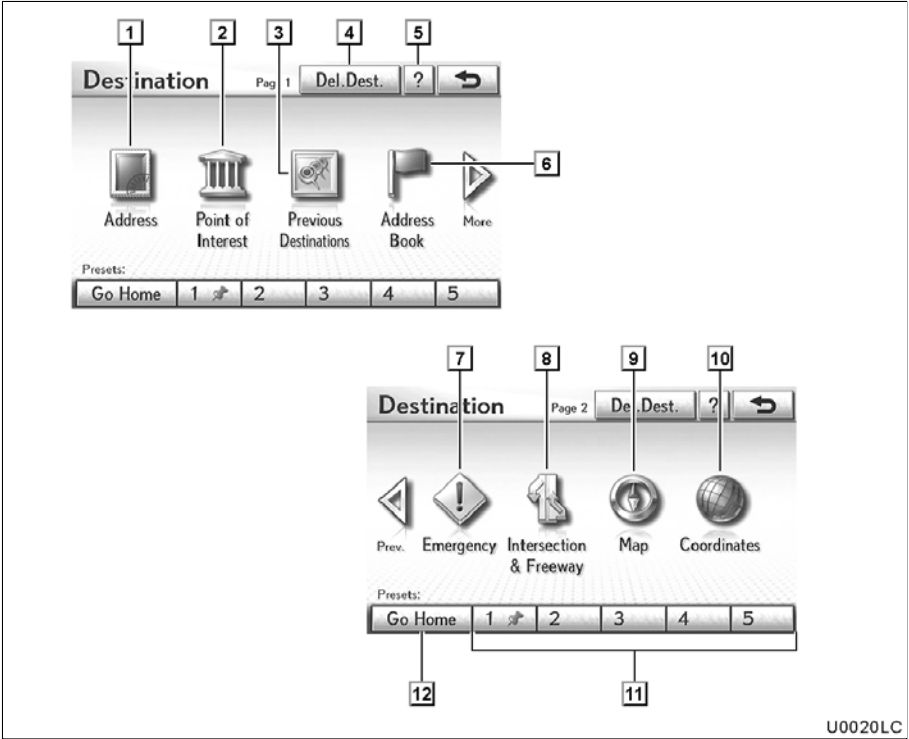

<b>1 “Address”</b>	<b>5 “?”</b>
A house number and the street address can be input by using the input keys. .... 69	Function help for the “Destination” screen can be viewed on this screen. .... 38
<b>2 “Point of Interest”</b>	<b>6 “Address Book”</b>
Select one of the many Points of Interest that have already been stored in the system’s database. .... 73	The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 123.) .... 80
<b>3 “Previous Destinations”</b>	<b>7 “Emergency”</b>
A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. .... 79	One of the four categories of emergency service points that are already stored in the system’s database can be selected. .... 80
<b>4 “Del. Dest.”</b>	
Set destinations can be deleted. .... 85	

**8 “Intersection & Freeway”**

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known. .... 81

**9 “Map”**

A destination can be selected simply by selecting the location on the displayed map. .... 84

**10 “Coordinates”**

A destination can be set using latitudes and longitudes as coordinates. .... 85

**11 Preset destination buttons**


One of 5 preset destination points can be selected by selecting the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “preset destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 120.) .... 68

**12 “Go Home”**

A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 117.) .... 68

## Quick reference (“Setup” screen)


The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button and select “Setup”.

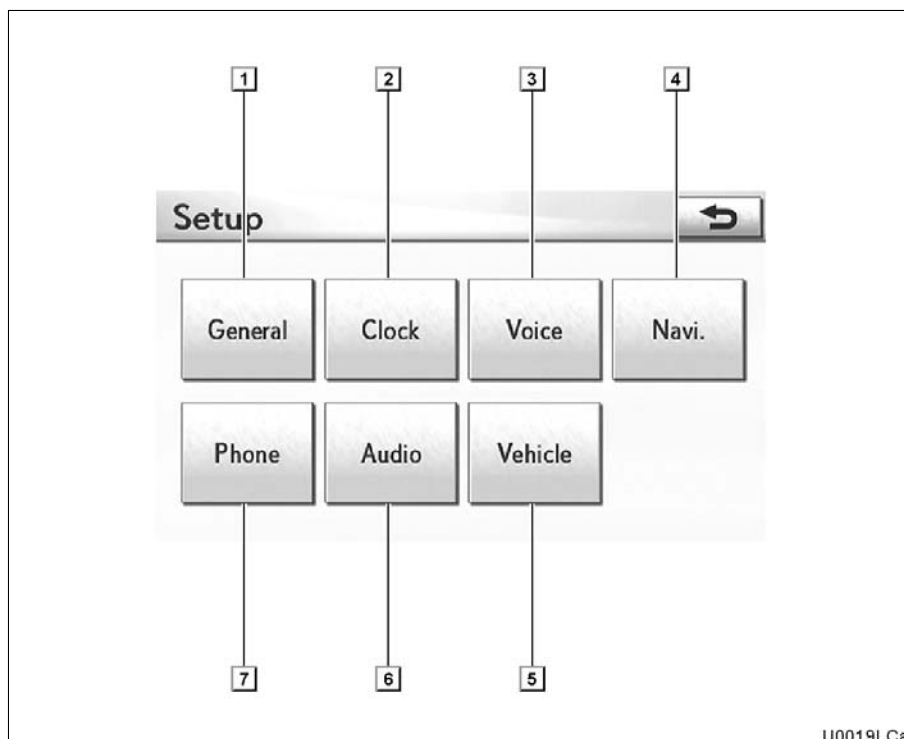

- |   |   |
|---|---|
| <p><b>1 “General”</b><br/>Settings are available for language selection, operation sounds, automatic screen change, etc. .... 314</p> <p><b>2 “Clock”</b><br/>Used for changing settings for time zones, daylight saving time, etc. .... 320</p> <p><b>3 “Voice”</b><br/>Voice guidance can be set. .... 322</p> <p><b>4 “Navi.”</b><br/>Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. .... 325</p> | <p><b>5 “Vehicle”</b><br/>Settings are available for vehicle information such as maintenance information. .... 381</p> <p><b>6 “Audio”</b><br/>Settings are available for portable audio devices, Bluetooth® audio devices etc. .... 373</p> <p><b>7 “Phone”</b><br/>Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. .... 335</p> |
|---|---|

## Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the **“MENU”** button and select **“Info./Phone”**.

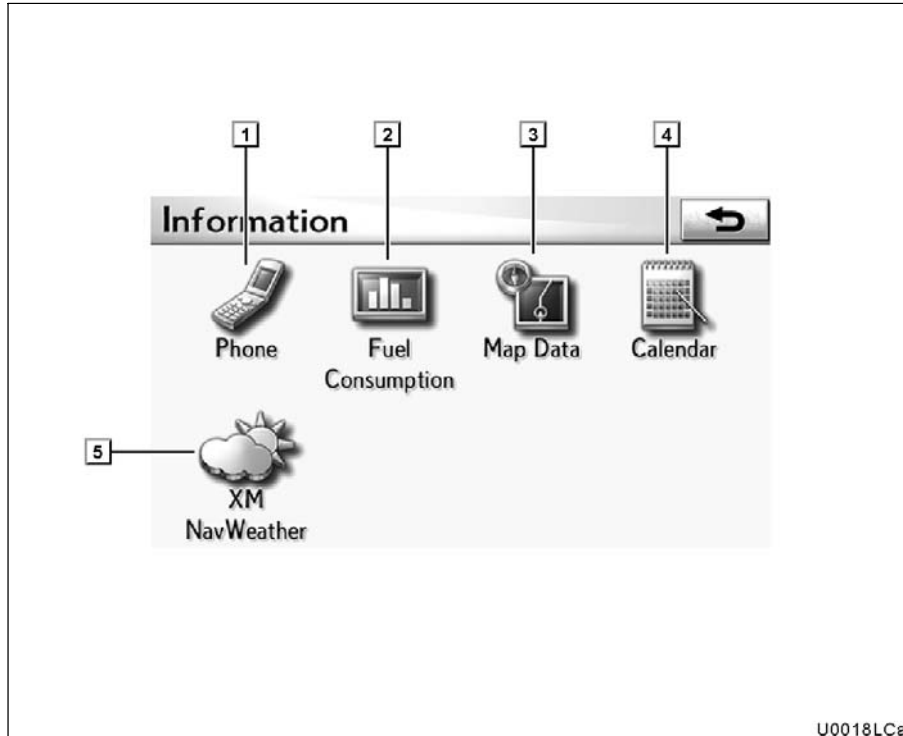

U0018LCa

- |  |   |
|--|---|
| <p><b>1 “Phone”</b><br/>To view hands free phone information.<br/>..... 140</p> <p><b>2 “Fuel Consumption”</b><br/>Fuel consumption is displayed. .... 155</p> <p><b>3 “Map Data”</b><br/>Displays information regarding the map<br/>data disc version or coverage area.<br/>..... 401</p> | <p><b>4 “Calendar”</b><br/>To view calendar. .... 156</p> <p><b>5 “XM NavWeather”</b><br/>To display the XM® NavWeather screen.<br/>..... 156</p> |
|--|---|